

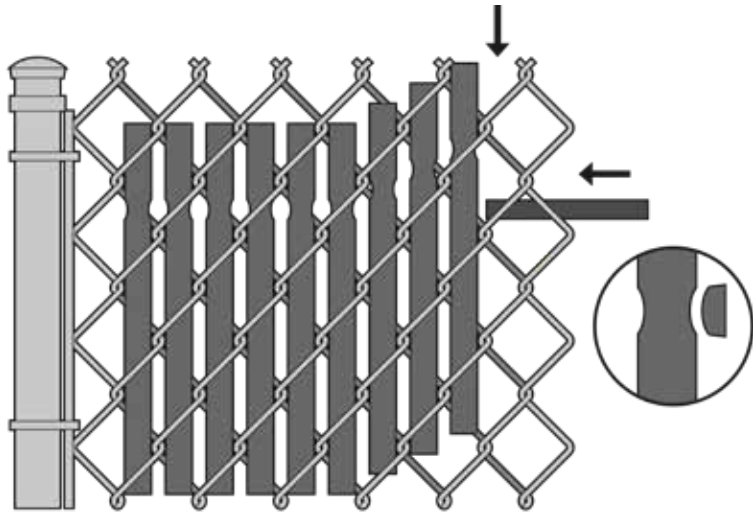


INSTALLATION INSTRUCTIONS

(Suggested installation instructions. Instructions vary per job site conditions)

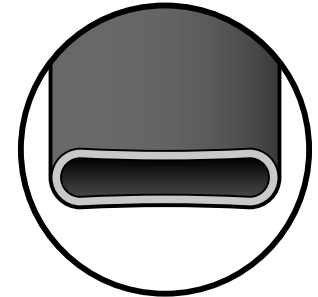

The holes are elliptical in shape to ensure they always stay open for fast and easy threading.

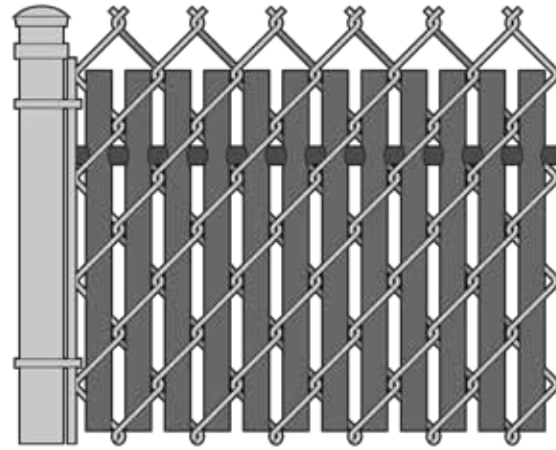

Slat end view

Step 1. Simply insert the slats vertically into the chain link mesh from top to bottom, keeping the locking holes on top.

Step 2. Thread the flexible locking channel horizontally through the notched holes in each slat.

SLAT NAME	SLAT WIDTH	MESH SIZE	WIRE GAUGE	COVERAGE AREA
TOP LOCK 2"	1 3/32"	2"	9 OR 11	10 LINEAR FEET
TOP LOCK 2 1/4"	1 1/4"	2 1/4"	11 1/2 OR 12	10 LINEAR FEET
TOP LOCK 1 3/4"	7/8"	1 3/4" 2"	9 or 11 6	10 LINEAR FEET

Top Locking Slat Specifications

Top Locking Fence Slats



130 West 700 South, Smithfield, UT 84335
 eprivacylink.com • 1-800-574-1076

PROJECT:

OWNER/GENERAL CONTRACTOR:

SUBMITTED BY:

DATE:

DRAWING NO: